



- ### Settings
- SW1.1 - ON: Set UART address to 0x2E8 (COM4)
  - SW1.2 - ON: Set UART address to 0x3E8 (COM3)
  - SW1.3 - ON: Set UART address to 0x2F8 (COM2)
  - SW1.4 - ON: Set UART address to 0x3F8 (COM1)
  - SW1.5 - ON: Use IRQ3 for UART (COM2, COM4)
  - SW1.6 - ON: Use IRQ4 for UART (COM1, COM3)
  - SW1.7 - ON: Use IRQ5 for UART
  - SW1.8 - ON: Use IRQ7 for UART
  - SW2.1 - ON: Enable EEPROM
  - SW2.2 - ON: Enable EEPROM write
  - SW2.3 - ON: ROM A17 = 0; OFF: ROM A17 = 1
  - SW2.4 - ON: ROM A16 = 0; OFF: ROM A16 = 1
  - SW2.5 - ON: ROM A15 = 0; OFF: ROM A15 = 1
  - SW2.6 - ON: ROM A14 = 0; OFF: ROM A14 = 1
  - SW2.7 - ON: ROM A13 = 0; OFF: ROM A13 = 1
  - SW2.8 - NOT USED